


# ZIP™ Shutter Curtain Replacement

## Replacing the Kevlar Curtain with the Stainless Steel Curtain

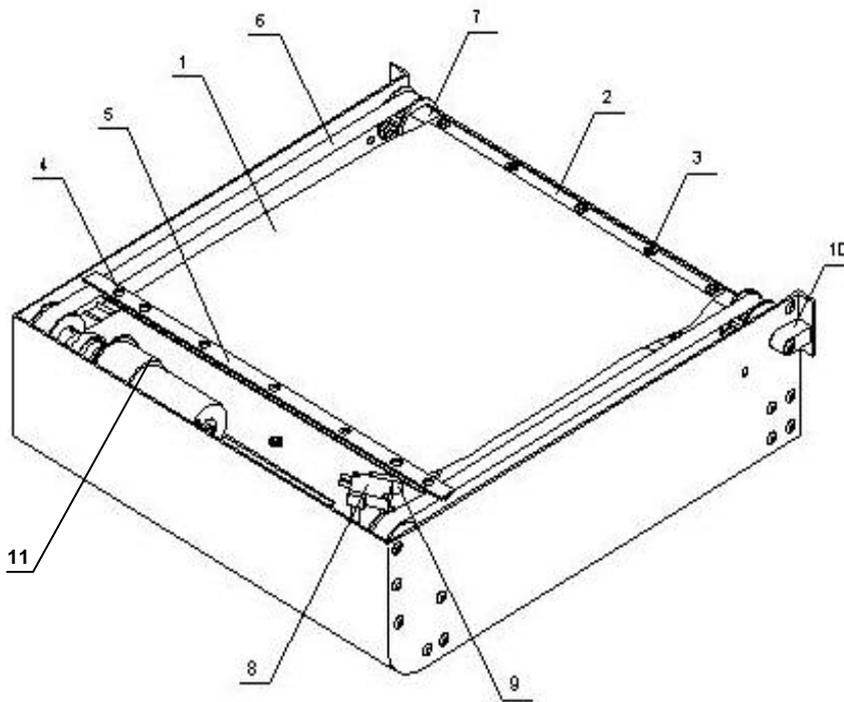

#	Description
1	Curtain
2	Roller Bar
3	Screws (5)
4	End Screws (2)
5	Clamp Bar
6	Belts
7	Roller and Pulley
8	Limit Switch
9	Limit Switch Standoff
10	Belt Tension
11	Belt Drive Motor

Figure 1. ZIP Shutter, Bottom View


### CAUTION! SHARP EDGES



The edge of the stainless steel curtain is extremely sharp. To prevent injuries, always wear gloves that are resistant to cuts when handling or installing equipment. We recommend, at a minimum, CE Cut Level 5 gloves (included with kit).

# Curtain Replacement Procedure

1. The Stainless Steel Curtain Assembly Kit (PN 41097) will contain the items show in Figure 2.

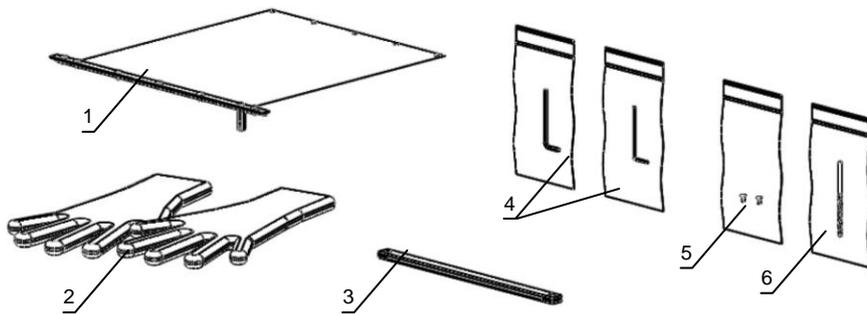

#	Description
1	SS Curtain Assembly
2	Cut-Resistant Gloves (Level 5)
3	Black Protective Wear Strip
4	Allen Wrenches
5	M3 x 6 mm Screws (Qty: 2)
6	Drill Bit #30

Figure 2. SS Curtain Assembly Kit

2. After putting on the enclosed cut-resistant Level 5 gloves, remove the three Retaining Screws on each side of the Lower Cover of the Shutter (Figure 4). Use the 2-mm Allen Wrench provided to do so.

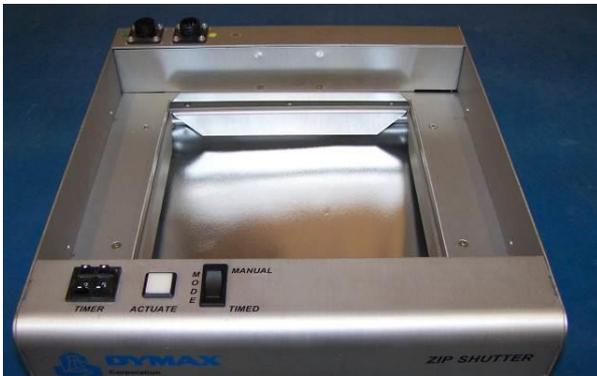


Figure 3. ZIP™ Shutter – Top View



Figure 4. Retaining Screws

3. Remove the three Phillips-Head Retaining Screws on the bottom of the Lower Cover of the Shutter (Figure 5). Lift the cover off the Shutter to reveal the inner Curtain Assembly (Figure 6).



Figure 5. Phillips-Head Retaining Screws



Figure 6. Inner Curtain Assembly

4. Manually unroll the Kevlar Curtain until the Curtain reaches the Front Limit Switch. Loosen the two End Screws (Figure 7) on the pulley side to release the grip from the Drive Belt.
5. Remove the five Retaining Screws holding the Kevlar Curtain to the Roller Bar. This will remove the Curtain Assembly from the Shutter (Figure 8).

6. To install the new Stainless Steel Curtain, affix the new Curtain to the Roller Bar first, using the five Retaining Screws. (Figure 9)



**CAUTION!** Use gloves rated, at a minimum, CE Cut Level 5 when installing the stainless steel material. The edges are very sharp and can cut during installation.



Figure 7. Loosen End Screws



Figure 8. Five Retaining Screws

7. Stretch the Curtain toward the front of the Shutter. When the Curtain is fully stretched out, loosen the two End Screws (Figure 7) and then slide the Clamp Bar onto the Belt (Figure 10). The Curtain should be stretched short of the Front Limit Switch.

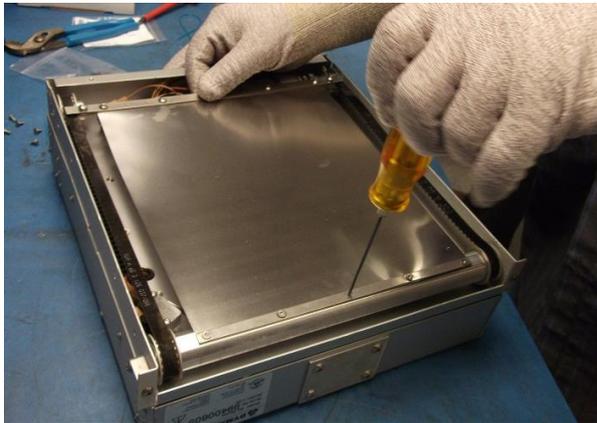


Figure 9. Install Curtain to Roller Bar with Five Retaining Screws



Figure 10. Slide the Clamp Bar onto the Belt

8. Tighten both M4 x 6 mm End Screws (Figure 11).
9. Manually roll up the Curtain until it reaches the Rear Limit Switch (Figure 12). If the Clamp Bar bows, loosen the screws and allow the Clamp Bar to find its natural straightness and retighten.



Figure 11. Tighten the M4 x 6 mm End Screws



Figure 12. Rear Limit Switch

10. Locate the roller-end of the Bottom Housing Plate. It contains the square notch and two location holes (Figure 13).
11. Place the Protective Wear Strip onto the Bottom Housing Plate (Figure 14). Use a marker to mark the location of the two holes.

**NOTE:** Slots located on Black Protective Wear Strip.

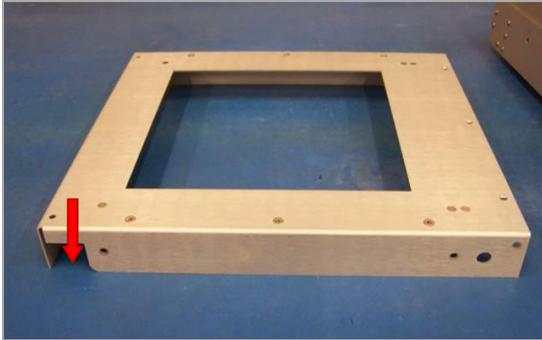


Figure 13. Roller End of the Bottom Housing Plate



Figure 14. Protective Wear Strip

12. Slide the Wear Strip up and out of the way. Insert Drill Bit #30 into a Drill Head. Be sure to tighten the Drill Head to ensure that the drill does not slip during operation.

**NOTE:** Always wear the appropriate personal protective equipment when using power tools.

13. Use a Hammer and a Pointed Punch to create a punch mark at the marked locations.
14. Drill holes thru the two marked locations (Figure 15).
15. Place the Wear Strip back down and confirm the holes line up with the holes just drilled.
16. Install the two M3 x 6 mm Screws (Figure 16).

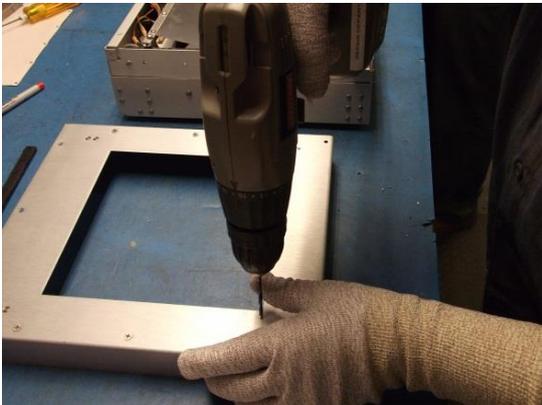


Figure 15. Drill Holes



Figure 16. Install M3 x 6 mm Screws into Wear Strip

17. Reinstall the Bottom Housing on the ZIP™ Shutter.
18. Set up the system according to the Shutter directions. Tighten the belt tension as needed to improve the belt performance.



© 2013 Dymax Corporation. All rights reserved. All trademarks in this guide, except where noted, are the property of, or used under license by Dymax Corporation, U.S.A.

The data contained in this bulletin is of a general nature and is based on laboratory test conditions. Dymax Europe GmbH does not warrant the data contained in this bulletin. Any warranty applicable to products, its application and use is strictly limited to that contained in Dymax Europe GmbH's General Terms and Conditions of Sale published on our homepage [www.dymax.com/de/pdf/dymax\\_europe\\_general\\_terms\\_and\\_conditions\\_of\\_sale.pdf](http://www.dymax.com/de/pdf/dymax_europe_general_terms_and_conditions_of_sale.pdf). Dymax Europe GmbH does not assume any responsibility for test or performance results obtained by users. It is the user's responsibility to determine the suitability for the product application and purposes and the suitability for use in the user's intended manufacturing apparatus and methods. The user should adopt such precautions and use guidelines as may be reasonably advisable or necessary for the protection of property and persons. Nothing in this bulletin shall act as a representation that the product use or application will not infringe a patent owned by someone other than Dymax Corporation or act as a grant of license under any Dymax Corporation Patent. Dymax Europe GmbH recommends that each user adequately test its proposed use and application of the products before actual repetitive use, using the data contained in this bulletin as a general guide.

QS055EU 8/15/2013

Dymax Corporation  
860.482.1010  
info@dymax.com  
[www.dymax.com](http://www.dymax.com)

Dymax Oligomers & Coatings  
860.626.7006  
oligomers&coatings@dymax.com  
[www.dymax-oc.com](http://www.dymax-oc.com)

Dymax Europe GmbH  
+49 (0) 611.962.7900  
info\_de@dymax.com  
[www.dymax.de](http://www.dymax.de)

Dymax UV Adhesives & Equipment (Shenzhen) Co Ltd  
+86.755.83485759  
dymaxasia@dymax.com  
[www.dymax.com.cn](http://www.dymax.com.cn)

Dymax UV Adhesives & Equipment (Shanghai) Co Ltd  
+86.21.37285759  
dymaxasia@dymax.com  
[www.dymax.com.cn](http://www.dymax.com.cn)

Dymax Asia (H.K.) Limited  
+852.2460.7038  
dymaxasia@dymax.com  
[www.dymax.com.cn](http://www.dymax.com.cn)

Dymax Korea LLC  
82.2.784.3434  
info@dymax.kr  
[www.dymax.co.kr](http://www.dymax.co.kr)